





# **SMART<sup>+</sup> WIFI CEILING FAN**

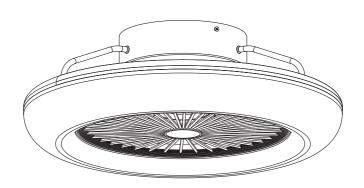


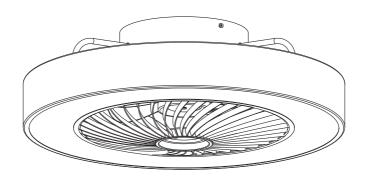



	EAN	w	lm	к	(°C)	V~	mA	Hz	PF	Fan W
SMART WIFI CEILING FAN RD REM TW WT	4058075572553	35	3000	3000-6500	-20+40	220-240	162	50/60	0.9	40
SMART WIFI CEILING FAN CYL REM TWGR	4058075572577	38	2500	3000-6500	-20+40	220-240	172	50/60	0.9	40


## SMART<sup>+</sup> WIFI CEILING FAN




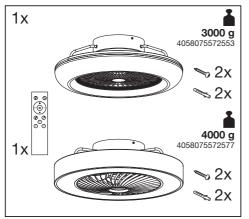


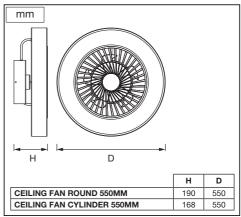

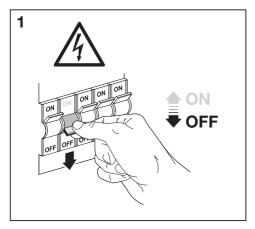

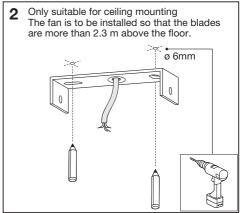


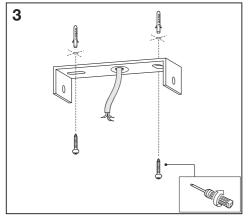


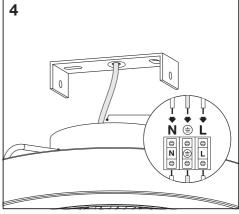



### SMART+ WIFI CEILING FAN



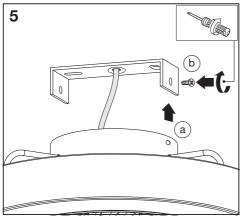

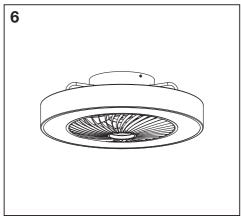

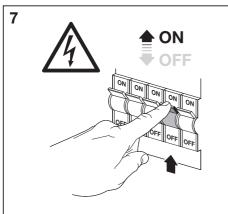

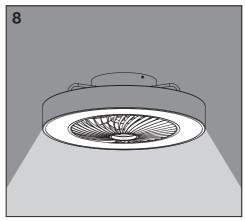

#### **WARNING**



- Do not place any objects in the path of the blades
- If unusual oscillating movement is observed, immediately stop using the ceiling fan and contact the manufacturer, its service agent or suitably qualified persons

#### MAINTAINANCE

- Once yearly clean your fan periodically to its new appearance
- Use only lukewarm water, do not use detergent, corrosive or acidic solution
- Damp the cloth lightly
- Use only soft or lint-free cloth to clean the fan, rough cloth will scratch the surface
- There is no need to oil the fan
- Use a soft cloth moisten with mild soap to clean the blade, and then use a dry cloth to wipe it again

