

# SZ-0132


## Schrank 5 Turig

ART. NR. 106132221

ART. NR. 106132222


ART. NR. 106132223

ART. NR. 106132224

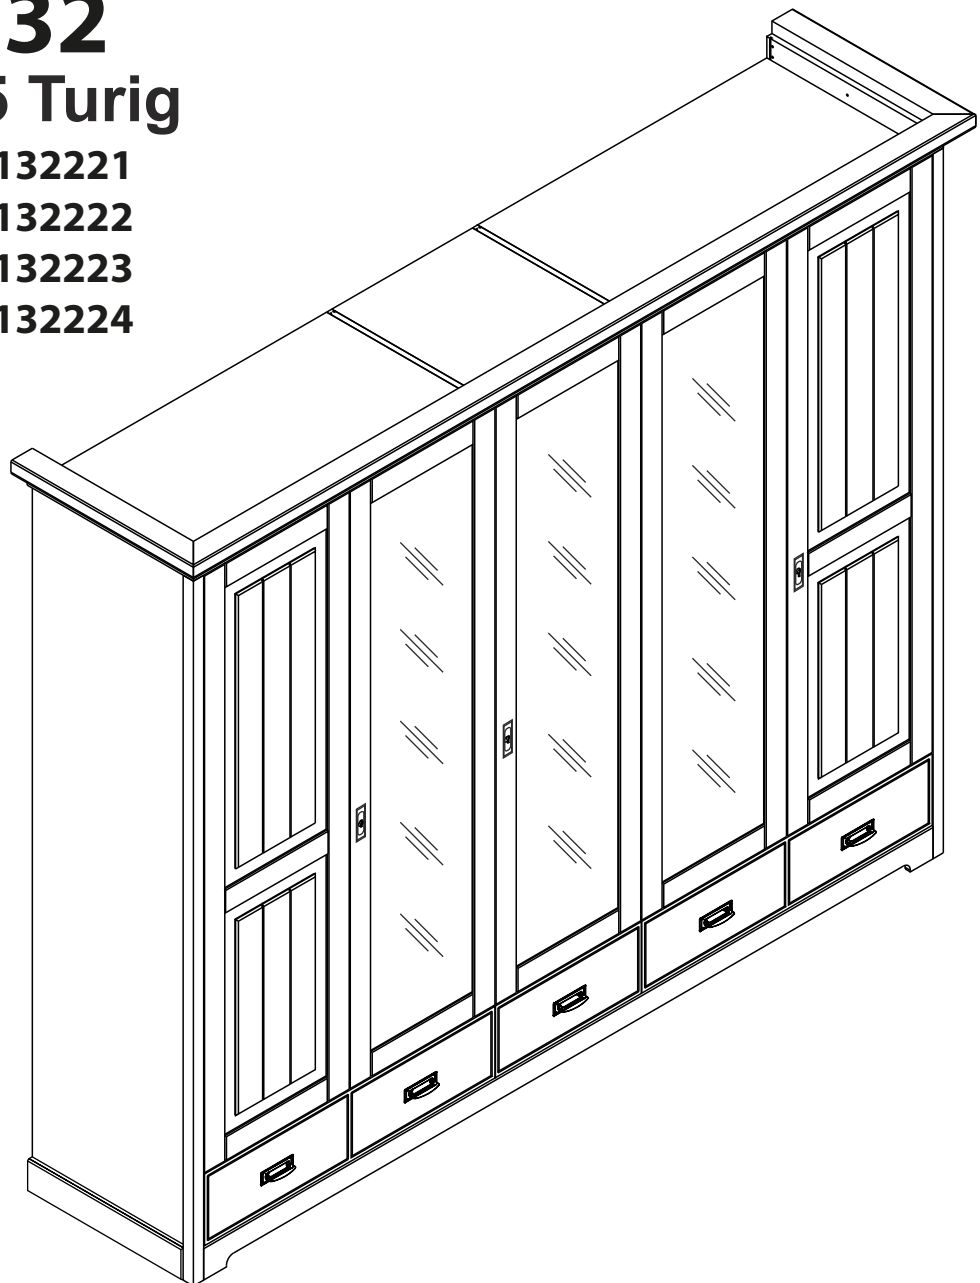

1 8x32 x20	2 8x60 x20	3 x16	4 x48	5 x16	40 x8
7 x9	8 x6	41 x8	10 x4	18 x6	32 x24
19 3,5x35 x18	20 3,5x30 x10	21 3,5x25 x8	22 3,5x16 x62	23 4x10 x6	24 4x25 x10
31 x5	33 6,3x11 x24	27 x2	28 x2	34 x2	30 x3
					11 x12

Aufbauzeit - 220 min.




# Schrank 5 Turig





ART. NR. 106132221

ART. NR. 106132222





ART. NR. 106132223

ART. NR. 106132224

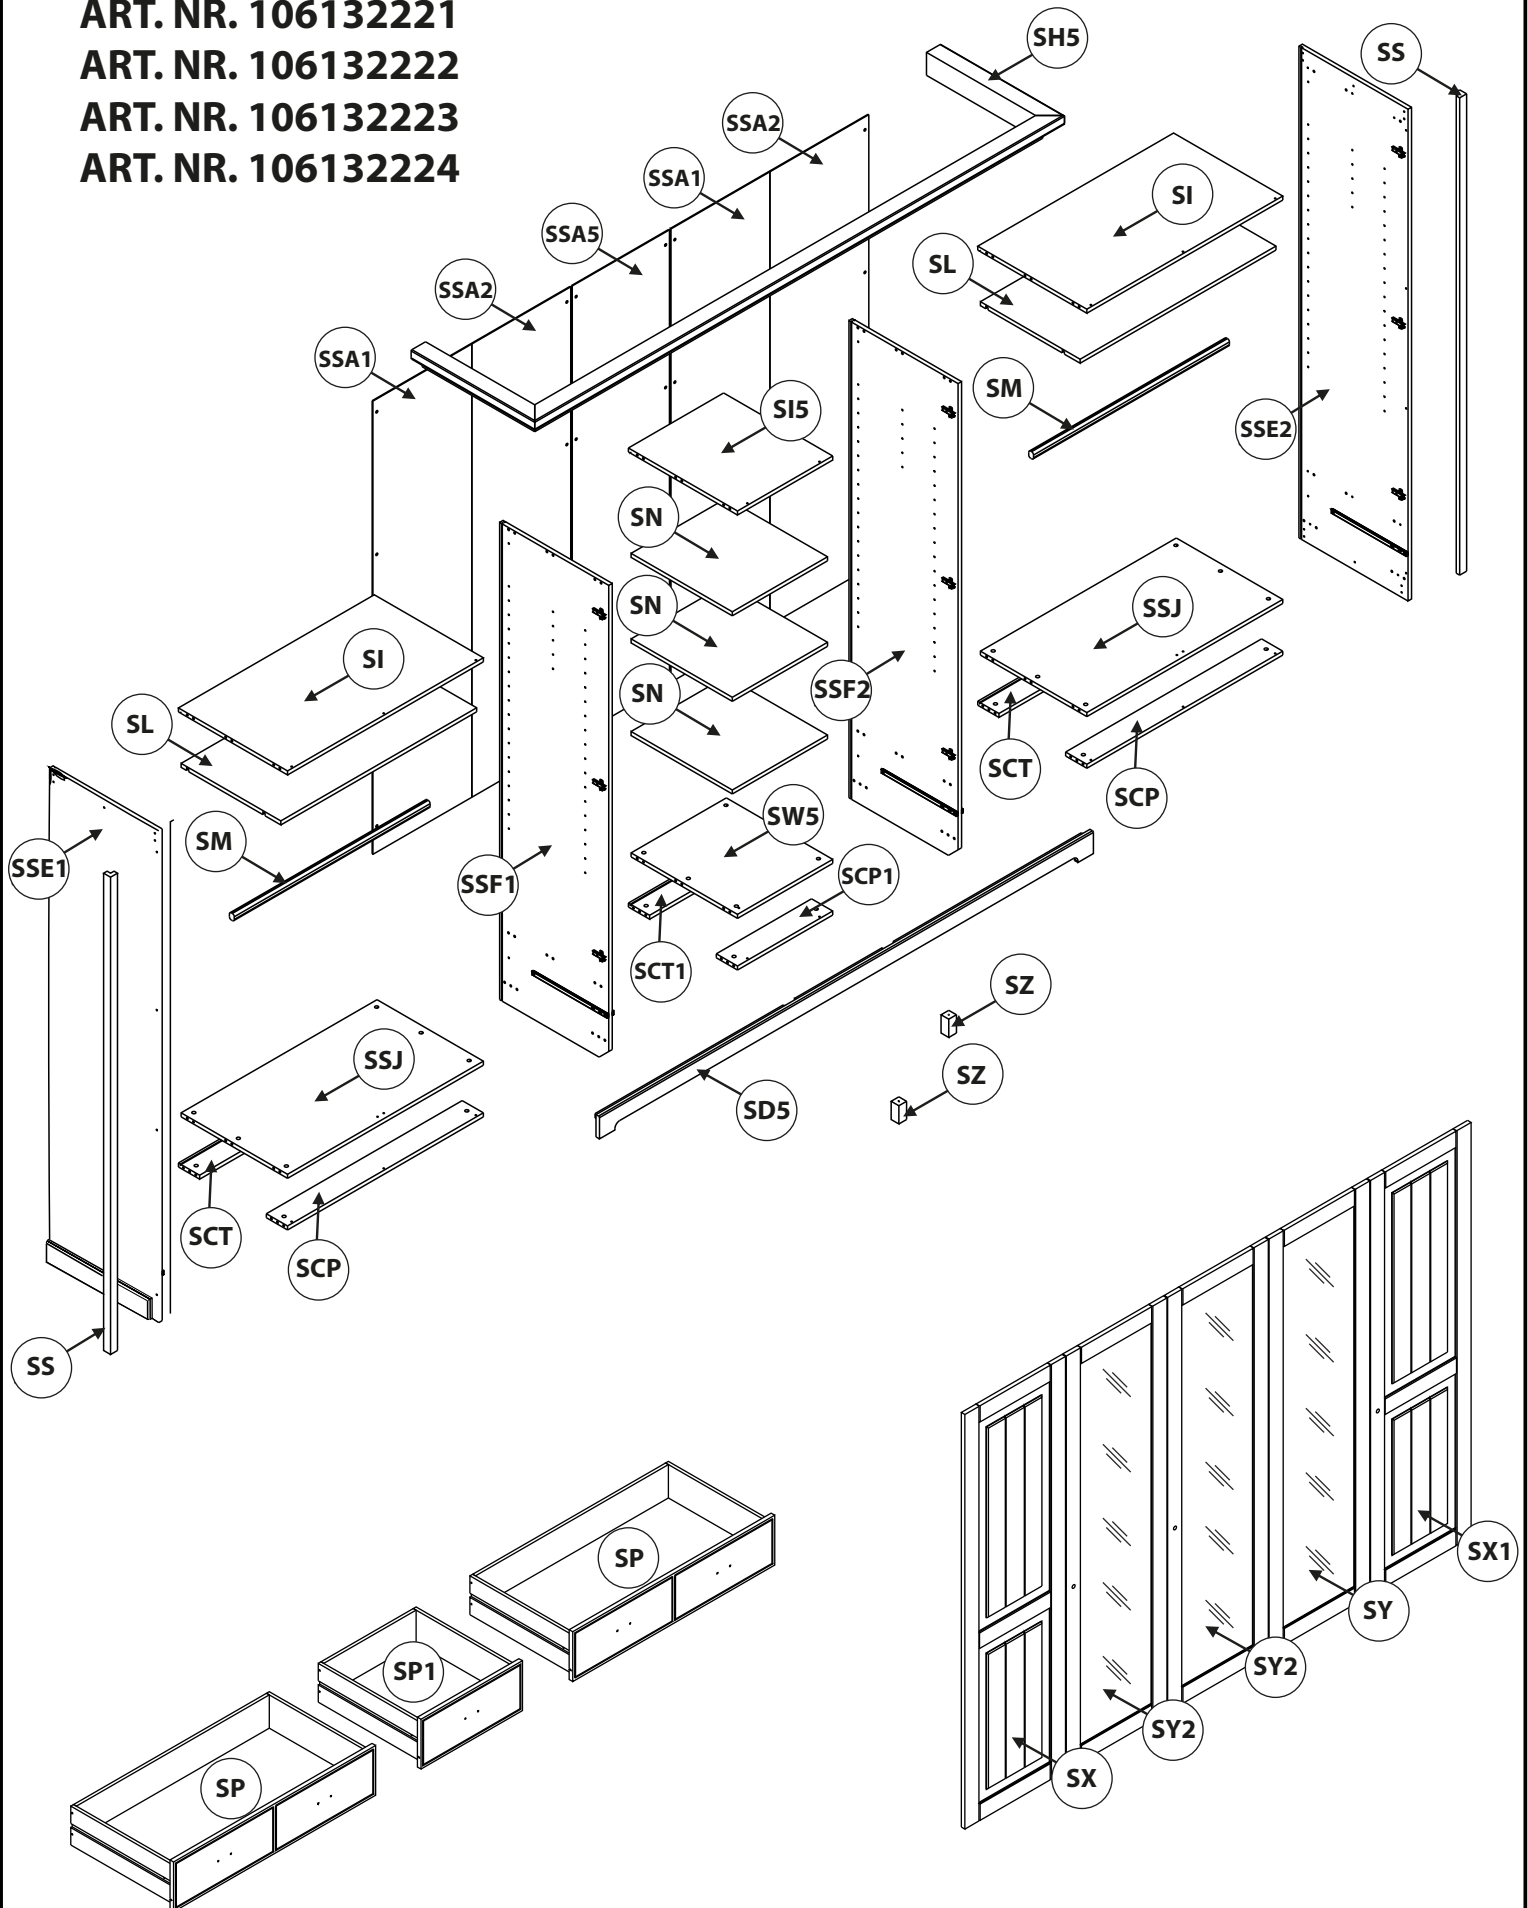

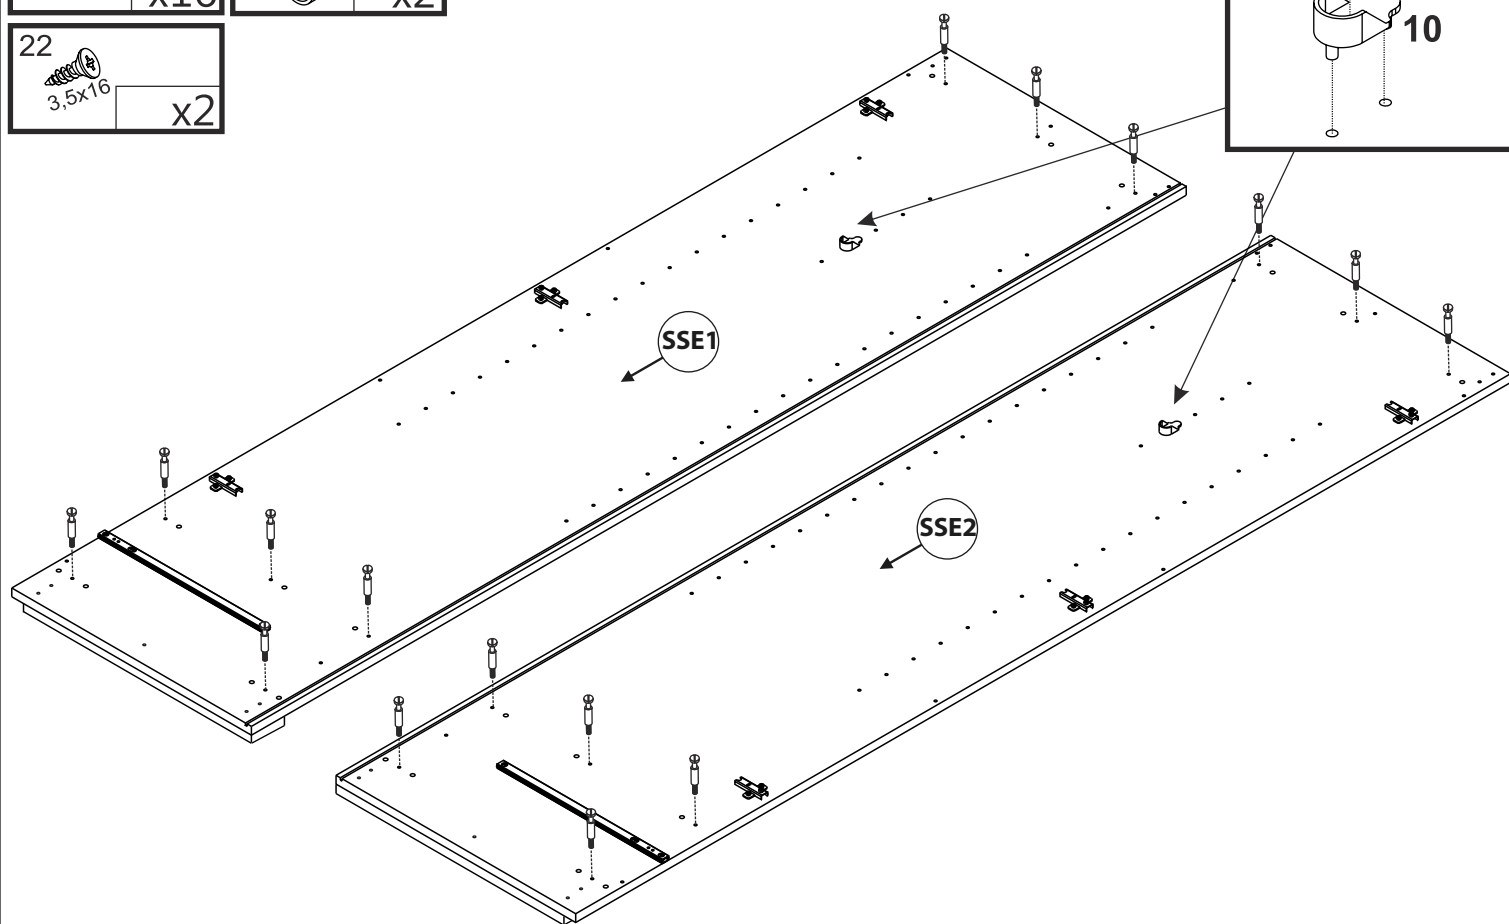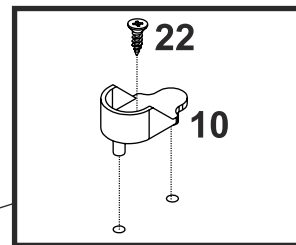





1

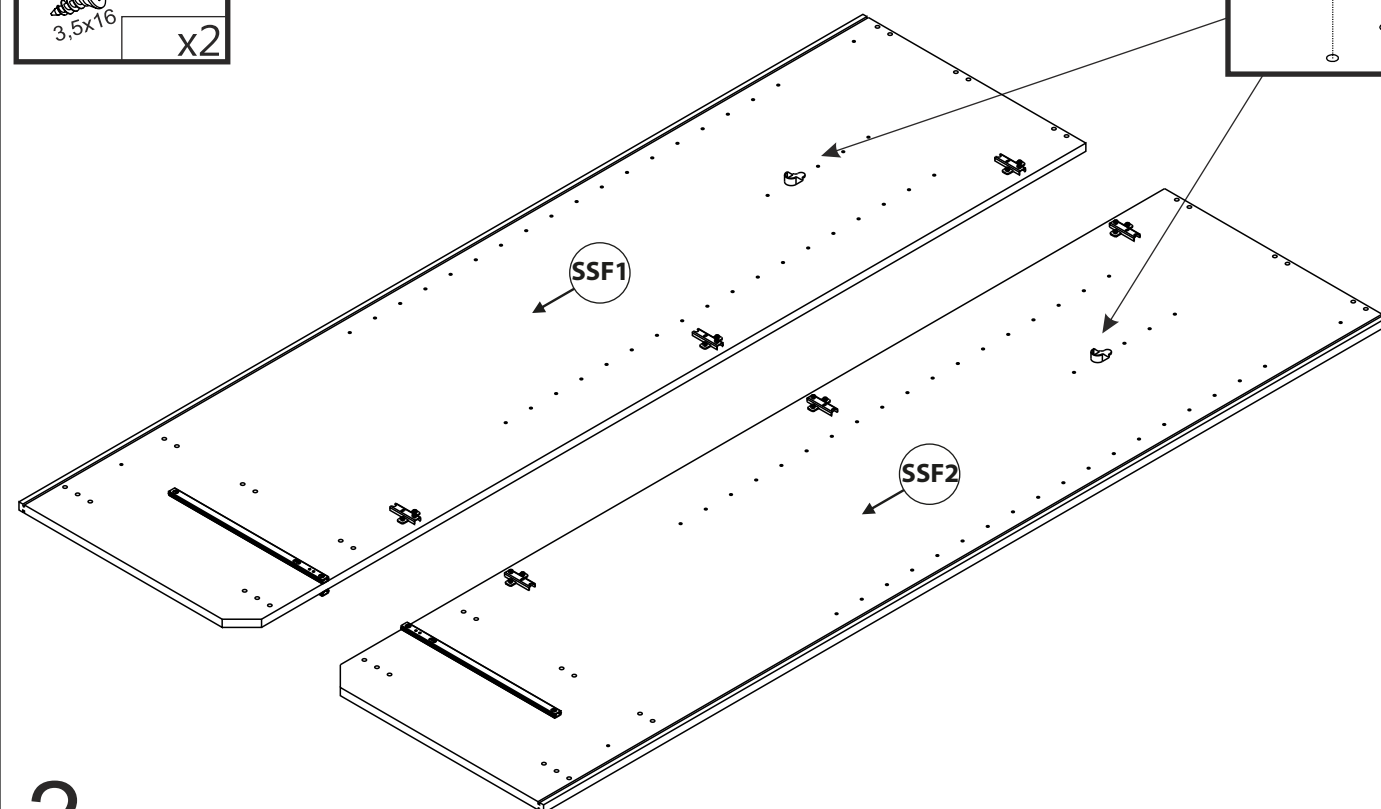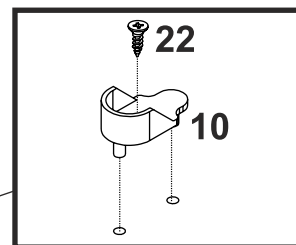

2

1 8x32 x6





28 x1

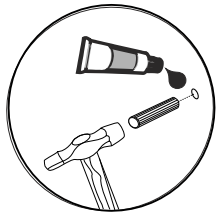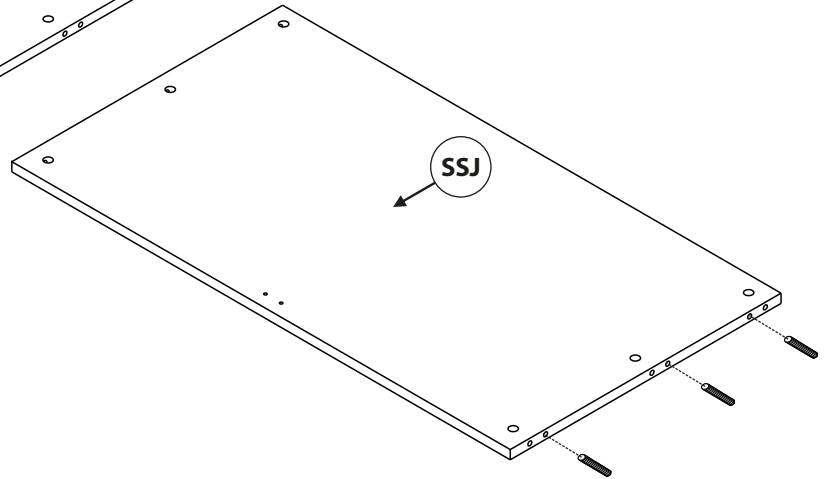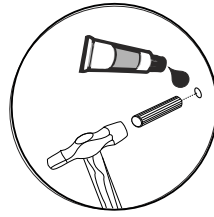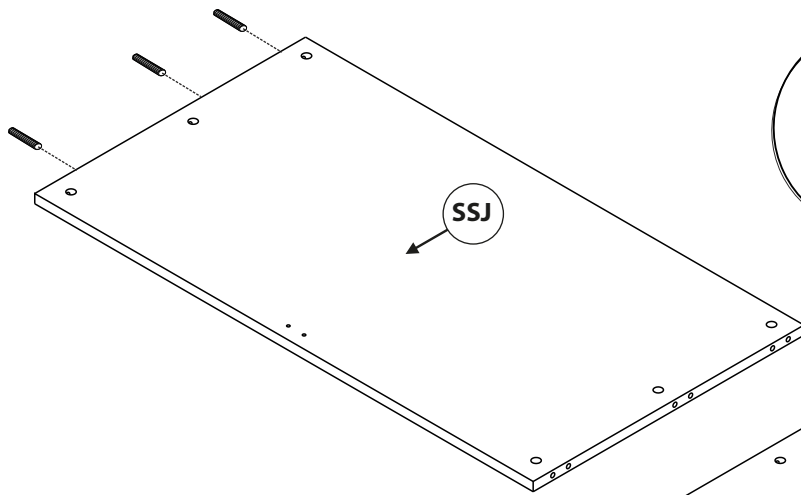



3

1 8x32 x6

28 x1

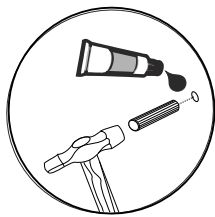
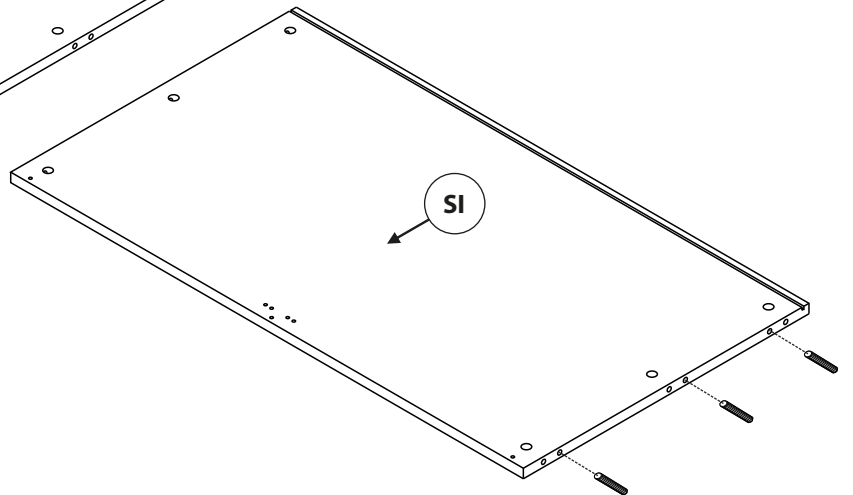
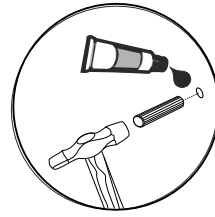
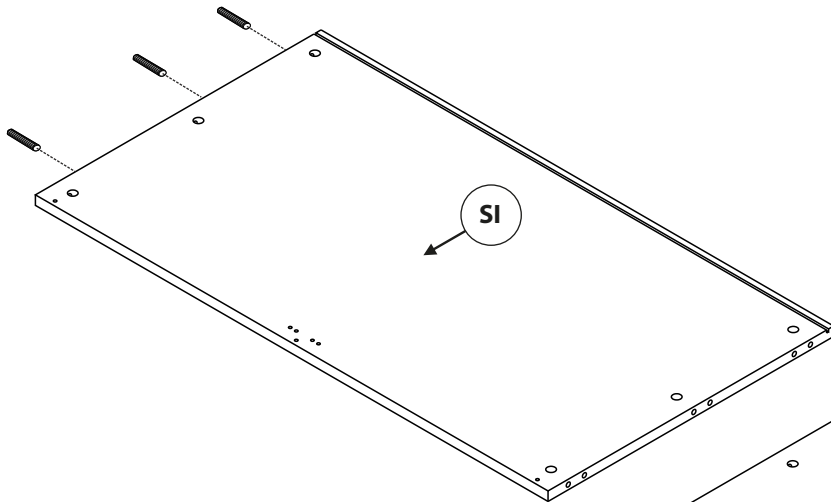


4

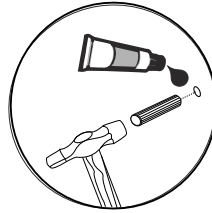
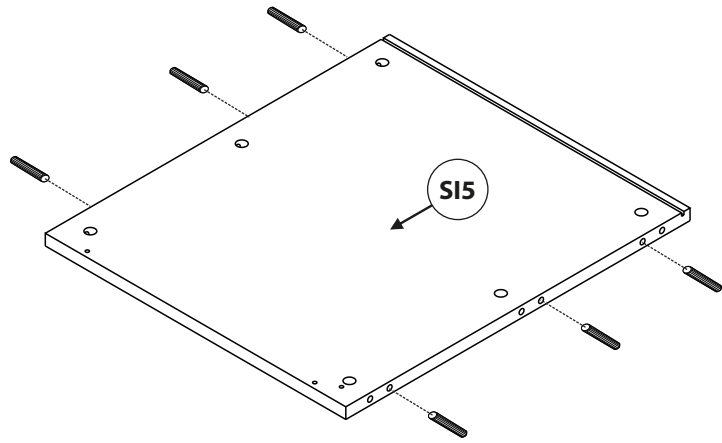


2 8x60 x20

28 x1

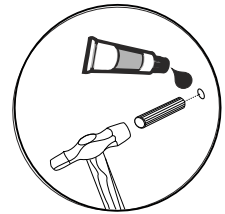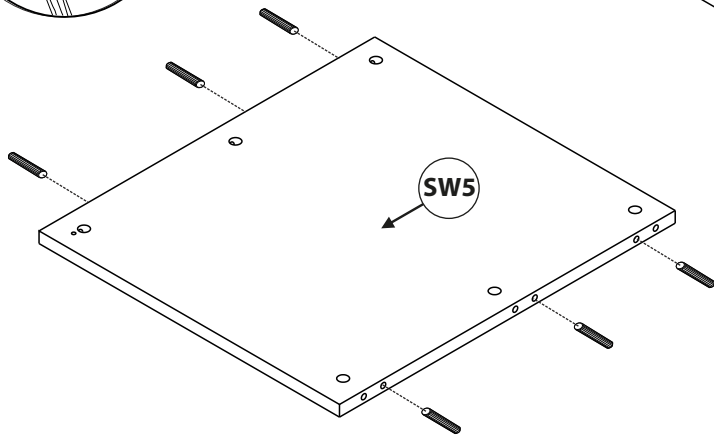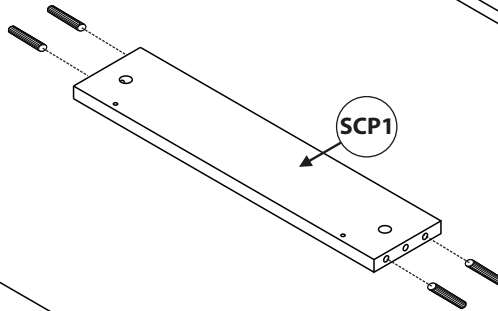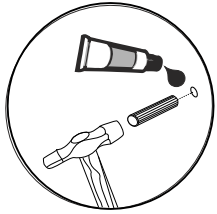



5

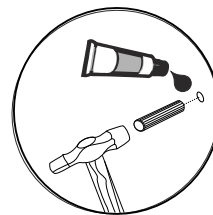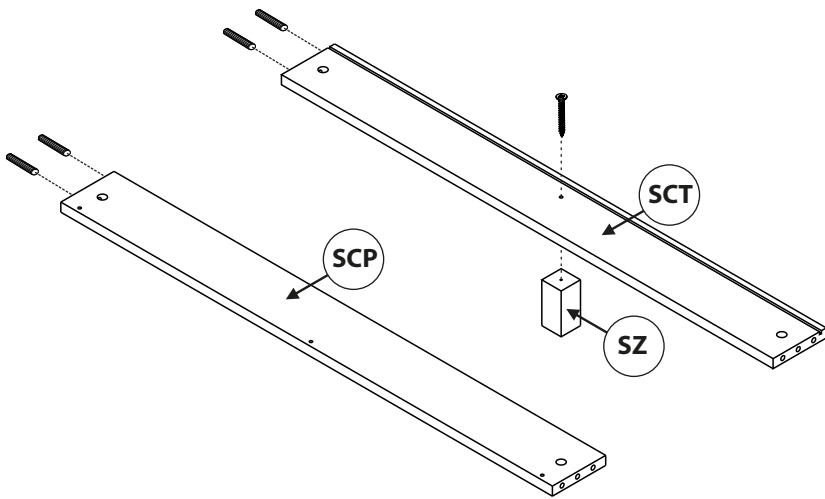














19 3.5x35 x2


1 8x32 x8

28 x1

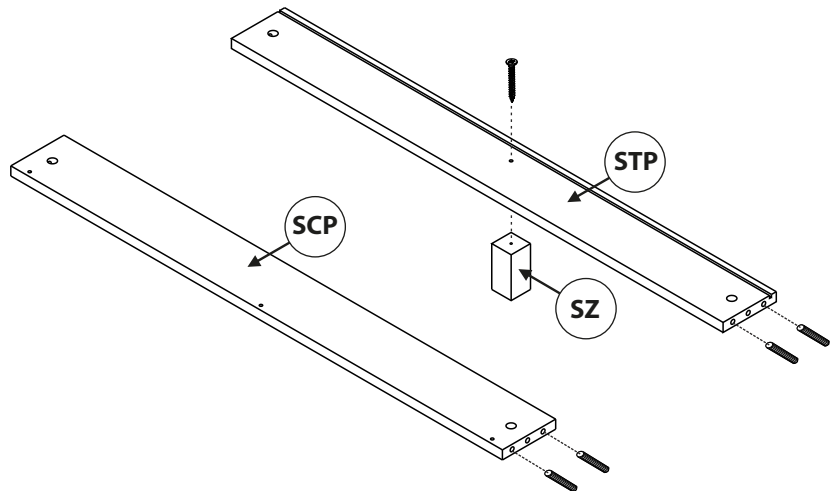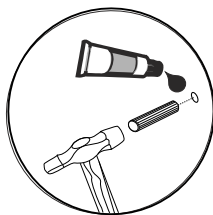


6

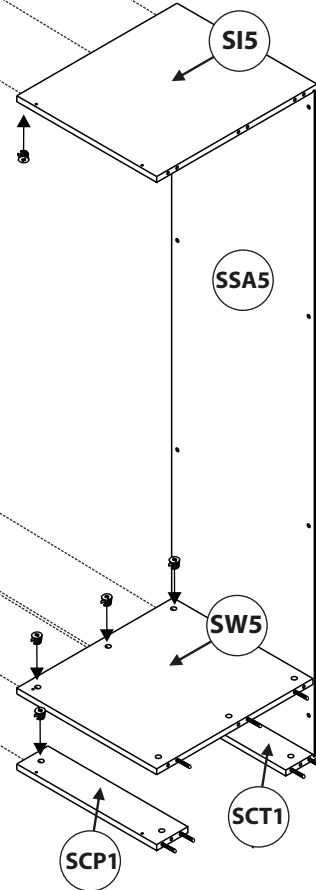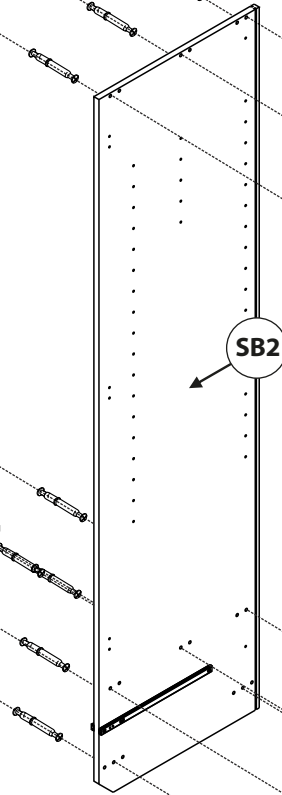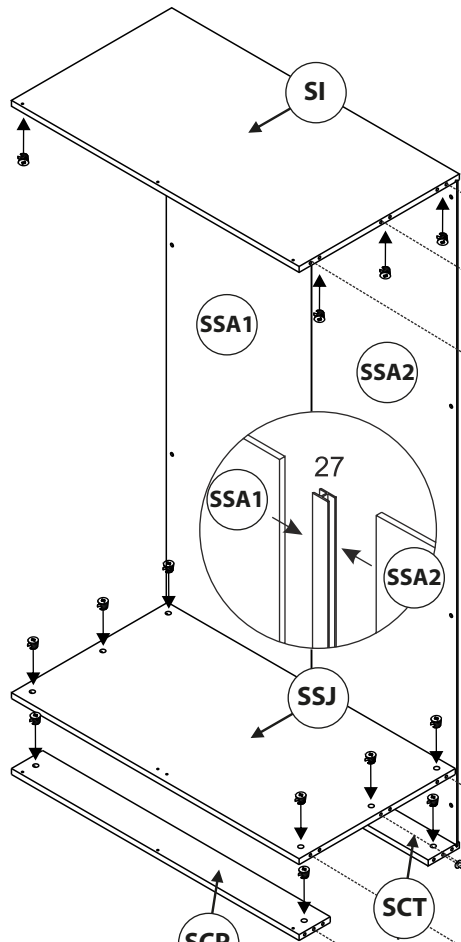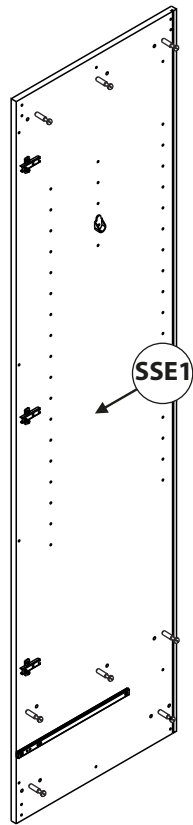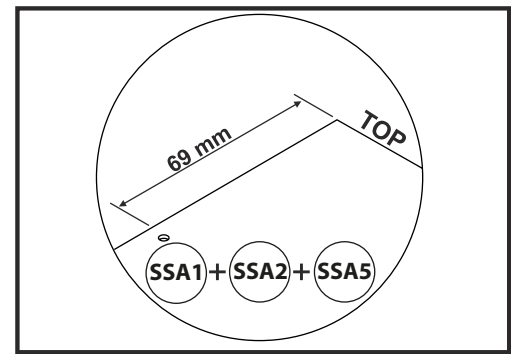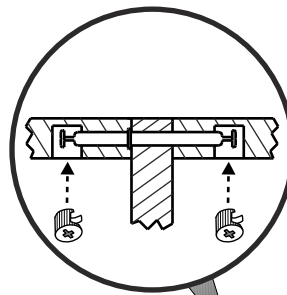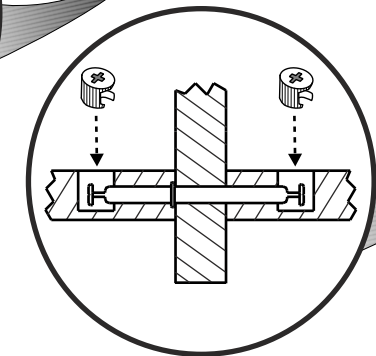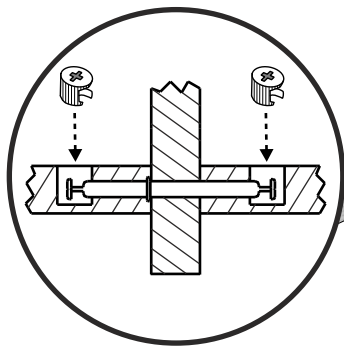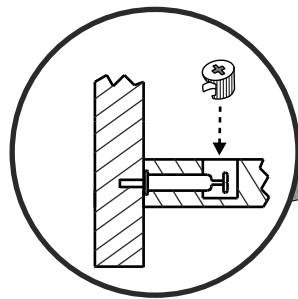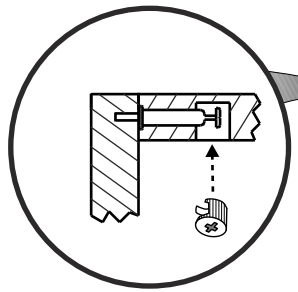


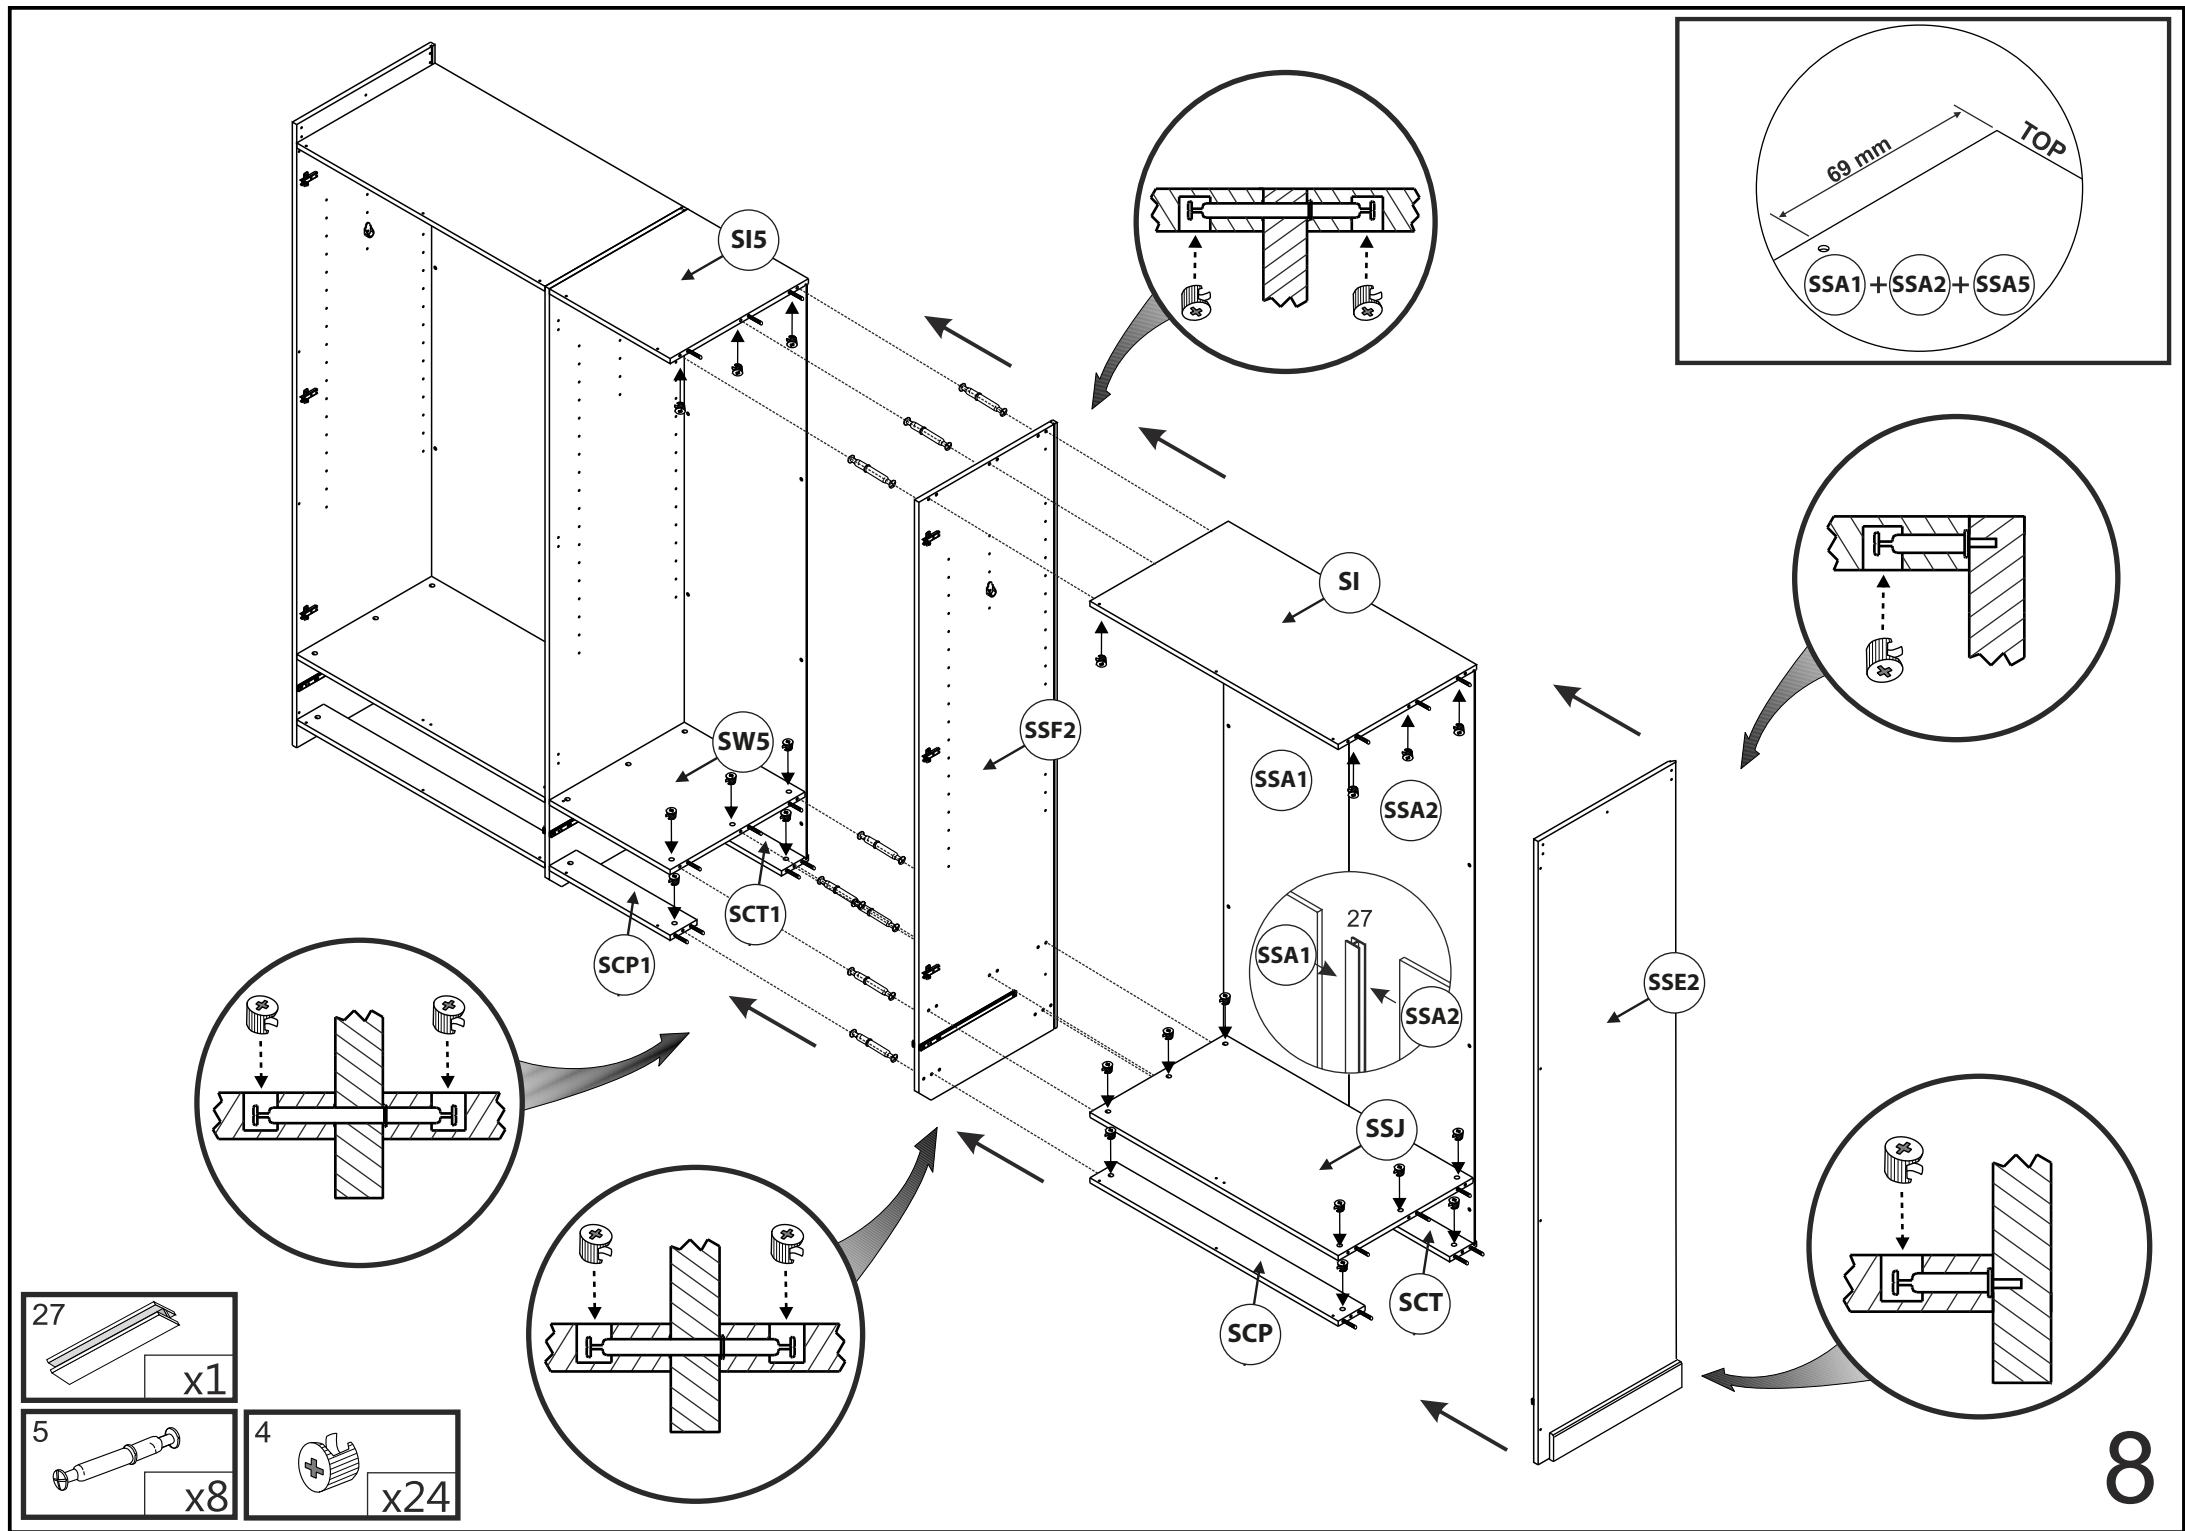






1

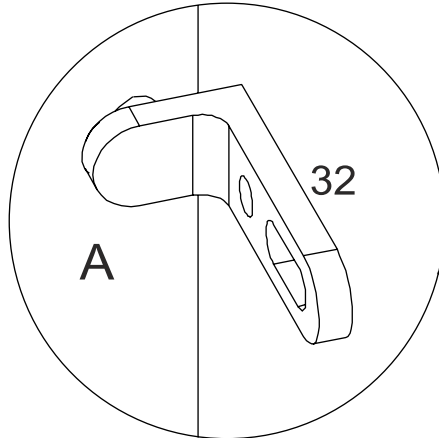

2


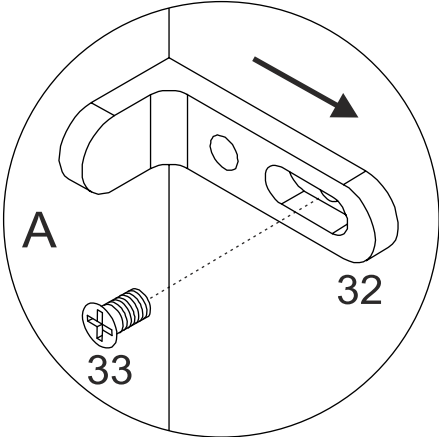


3

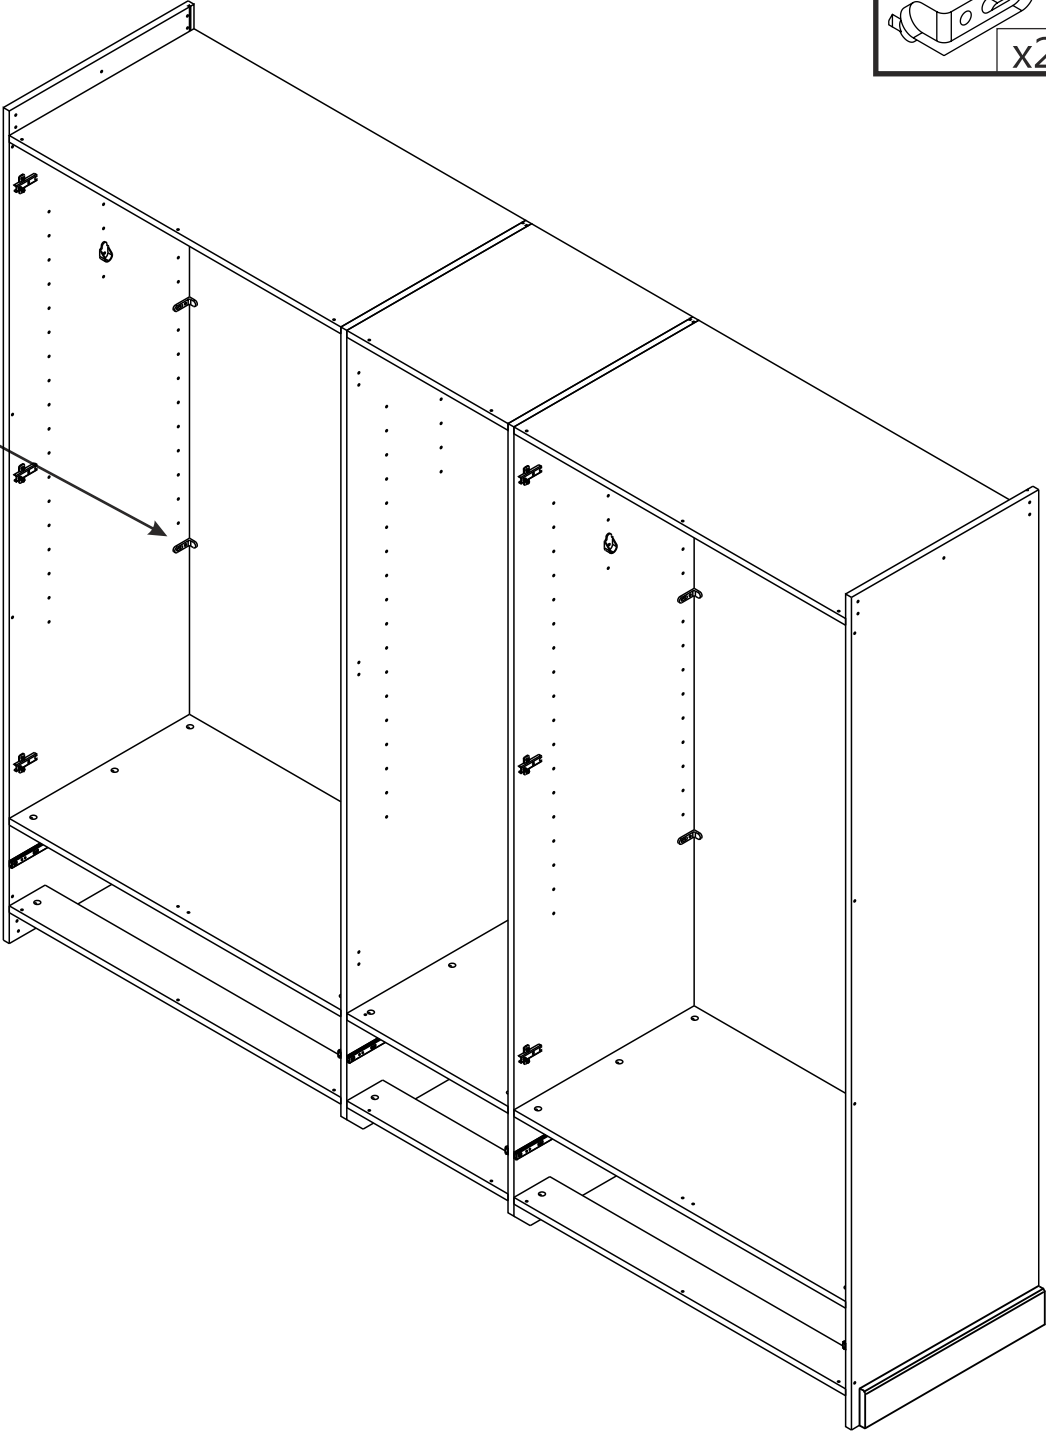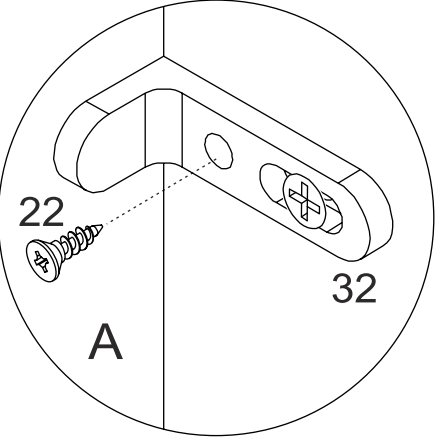







21  
3,5x25  
x8


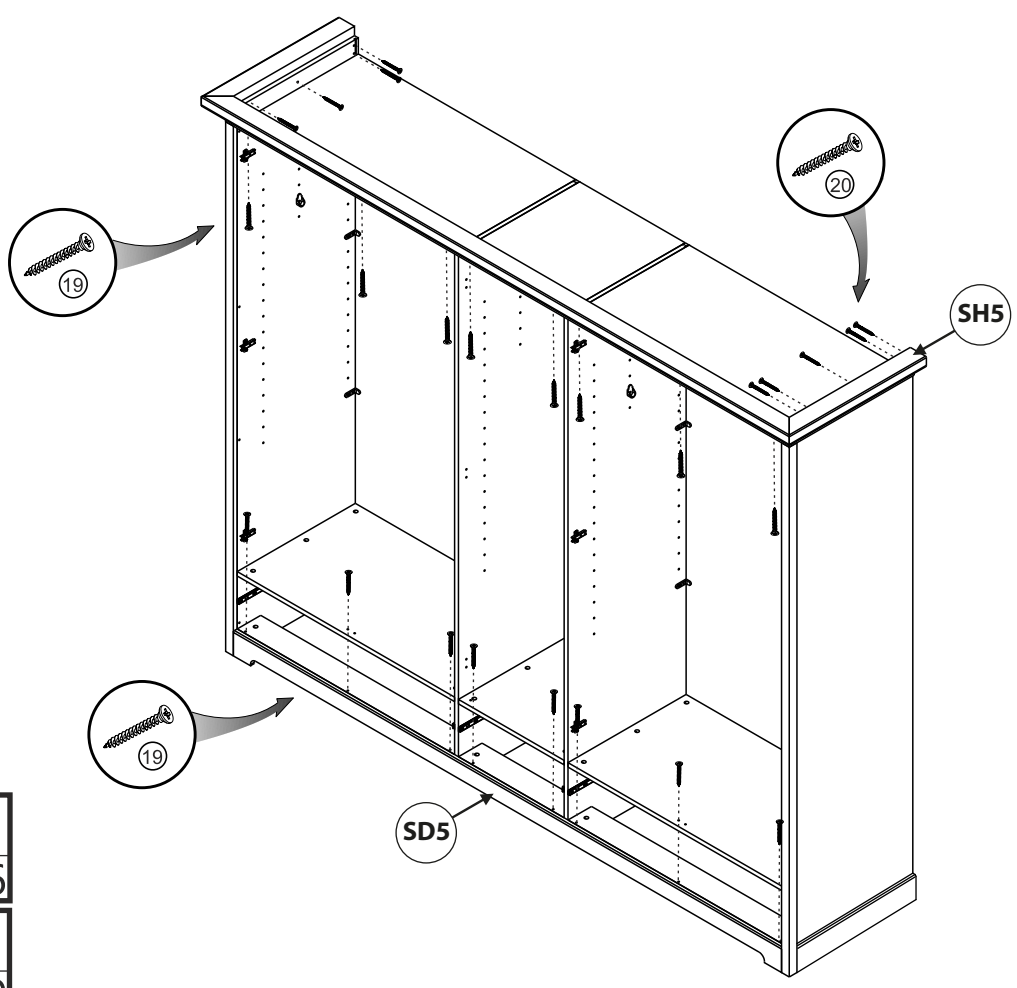
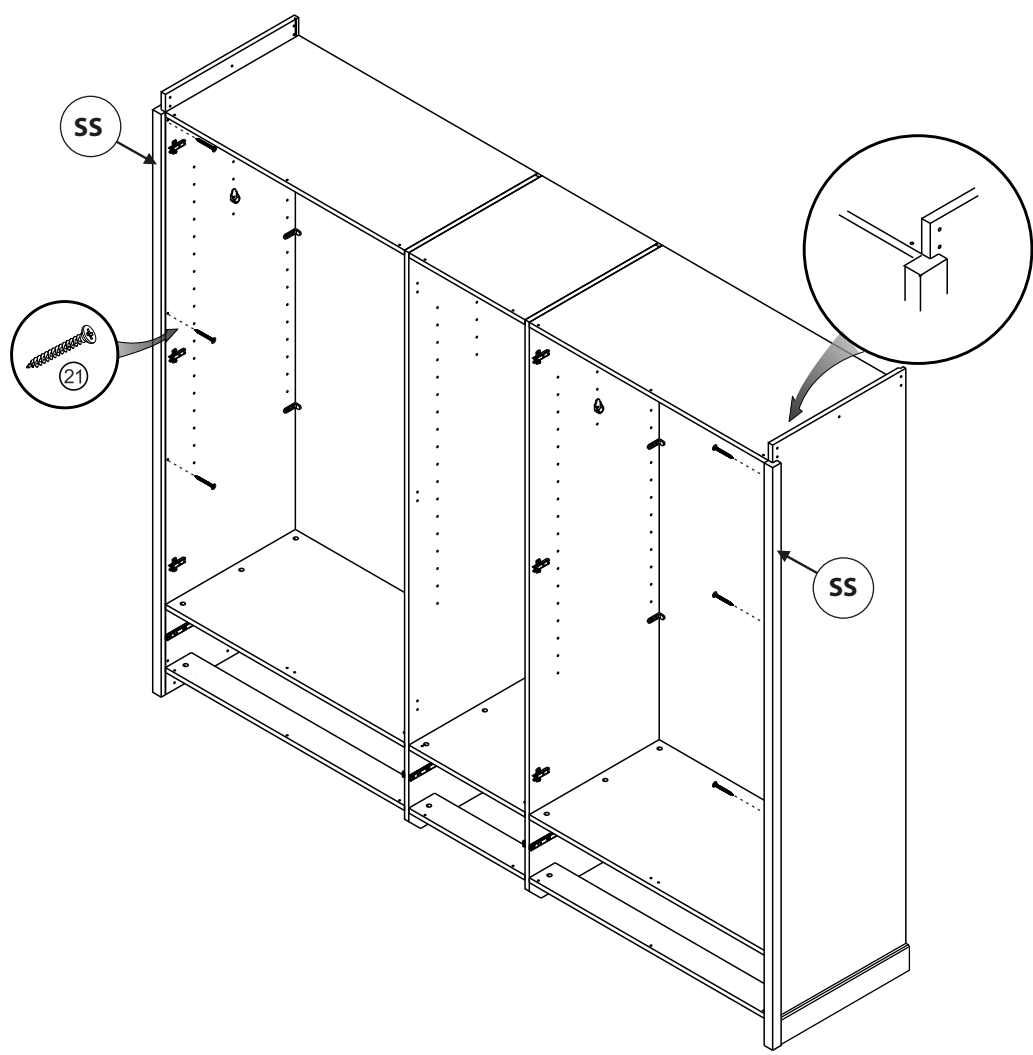



19  
3,5x35  
x16

20  
3,5x30  
x10



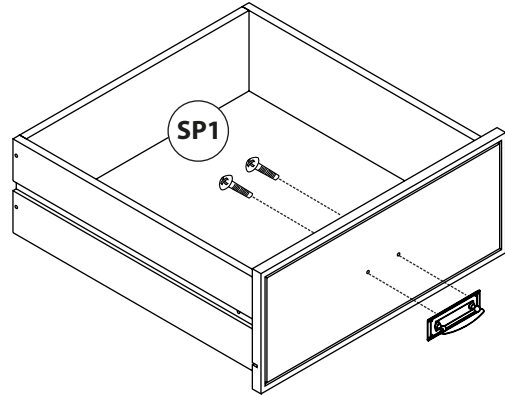
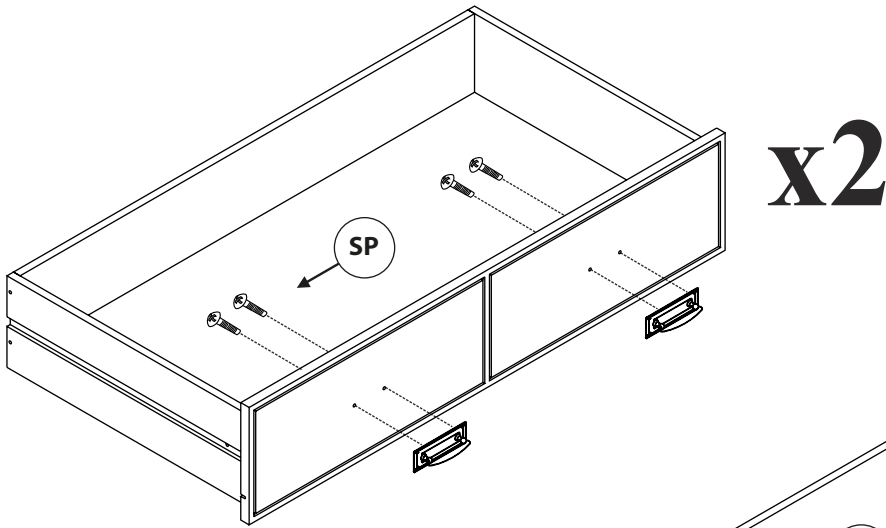


x2



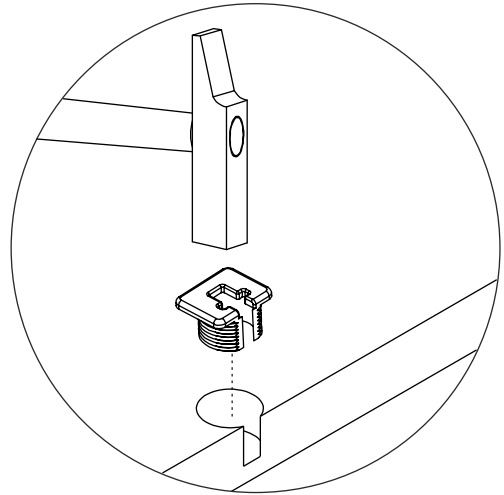
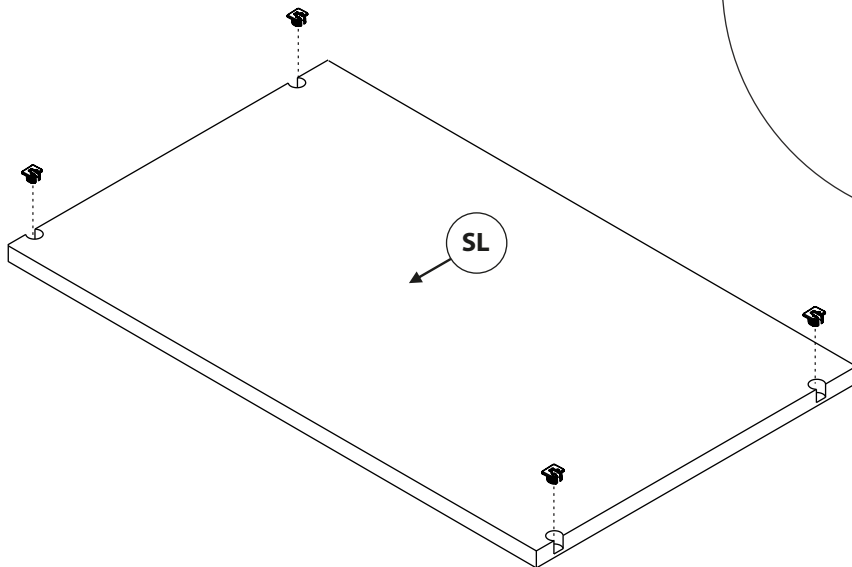


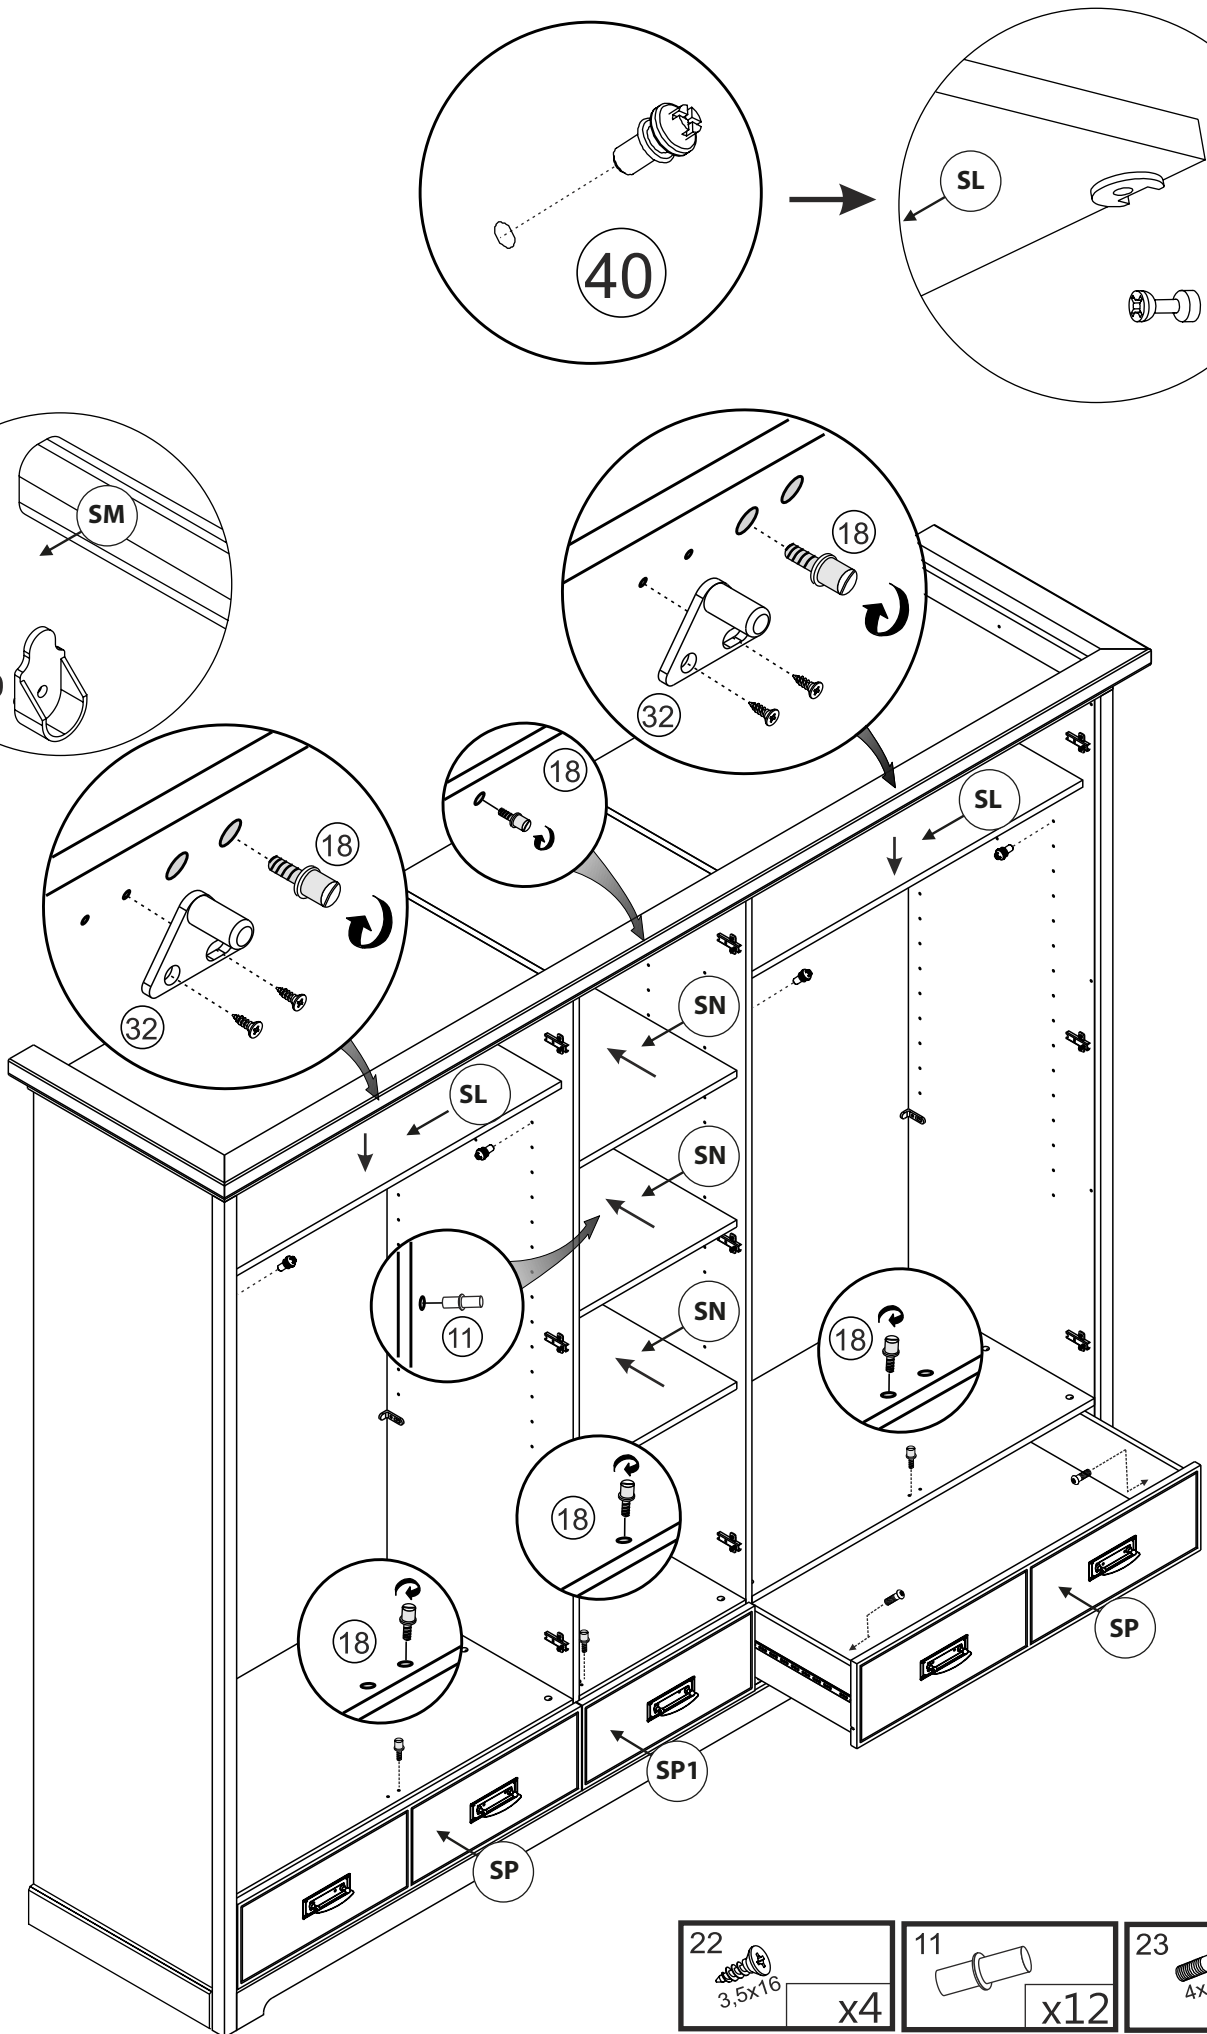

22 3,5x16 x4	11 x12	23 4x10 x6
34 x2	40 x8	18 x6

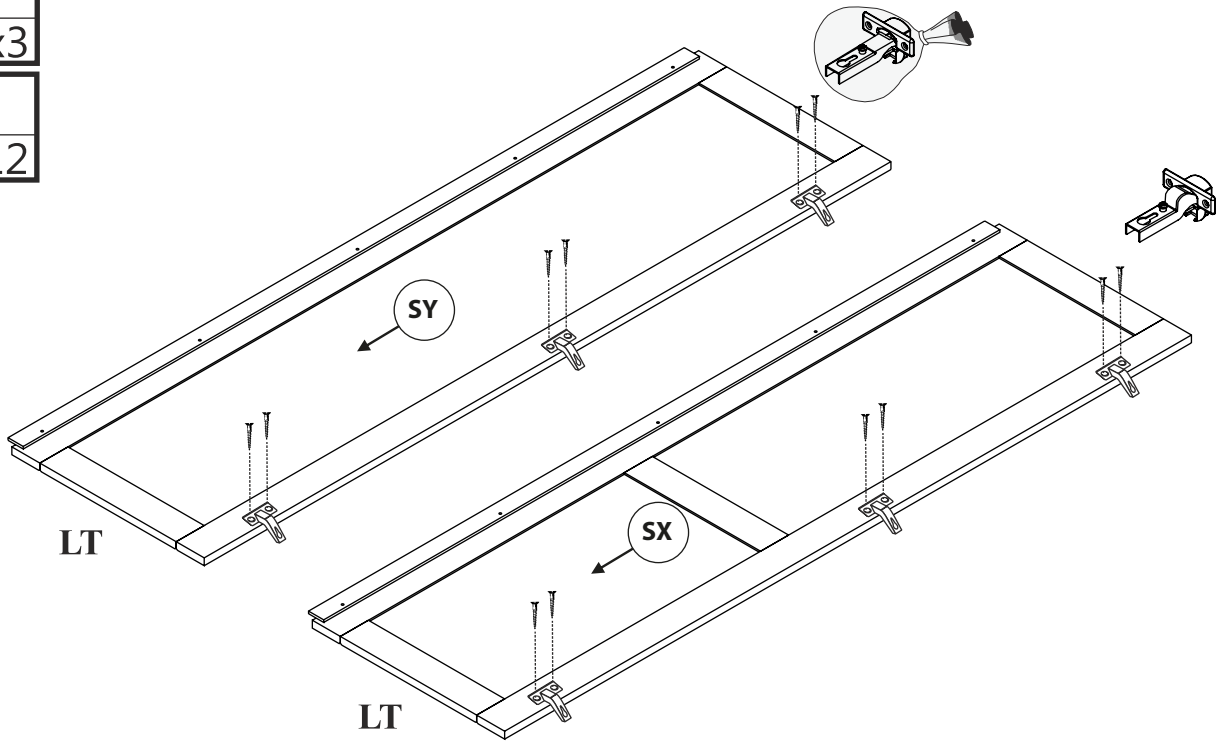

15

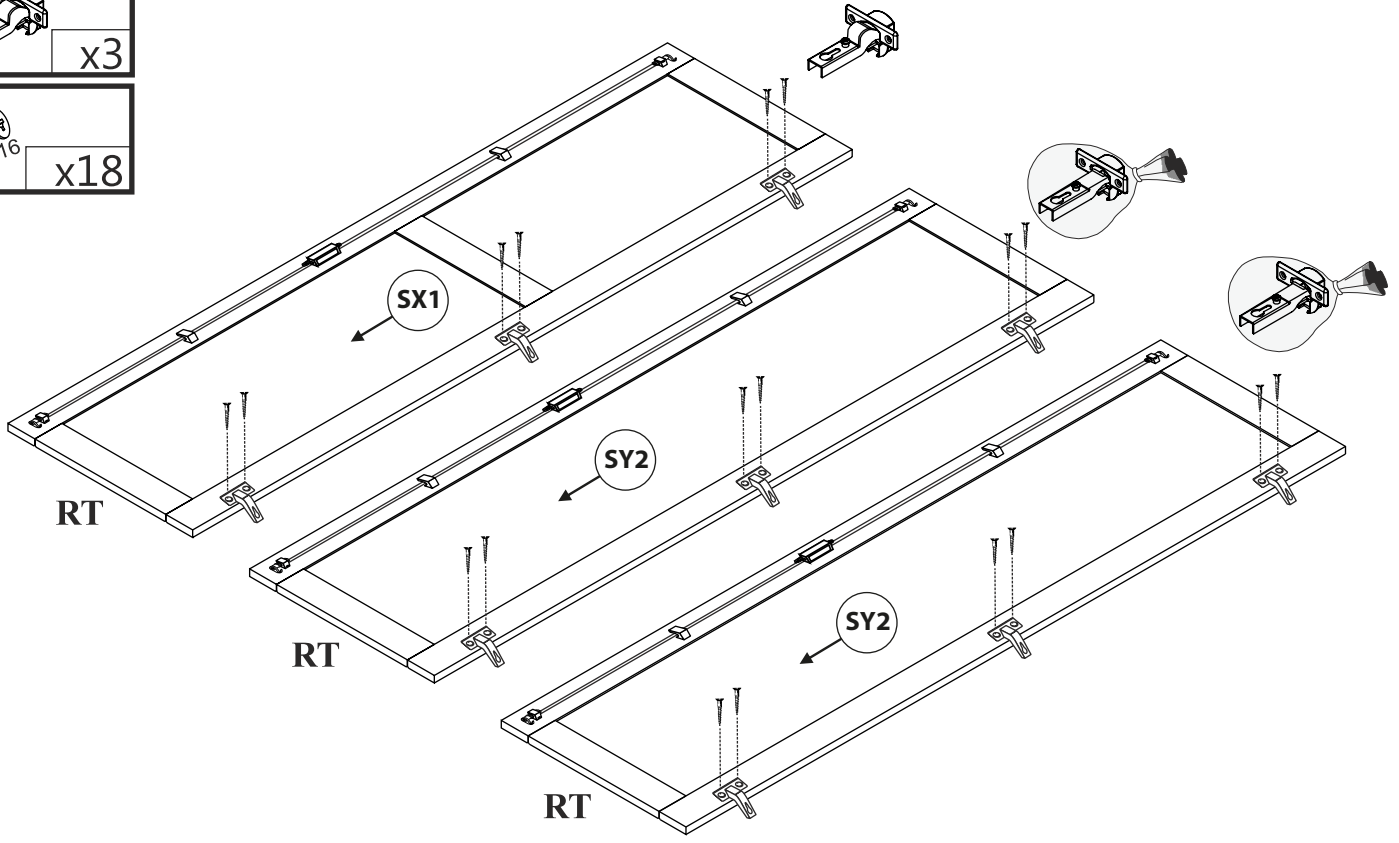

16

